 


INSTALLATION GUIDE

 
Step 1.

Start the Midfighter Utility and click on “Import Settings” button then navigate to the place on your computer where “MF64_RMX_UTILITYSettings_1.1.mfs” file is saved to open it.

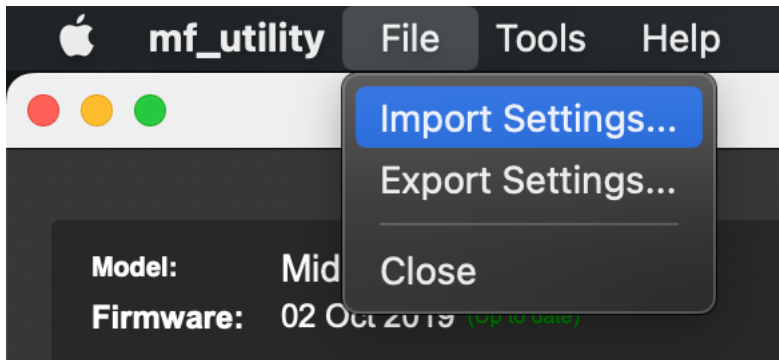

Step 2.


Click on “Send to Midfighter” to apply new settings to the device firmware.

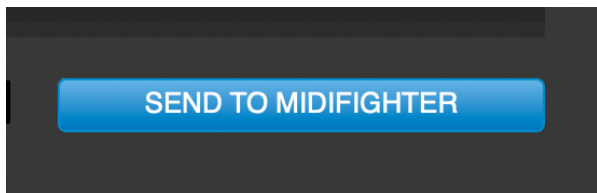

Important Note: If you are running Windows OS on your computer then close the Utility at this point because a single controller MIDI port cannot be shared across multiple application inside Windows.


Step 3.

 Start Traktor and click on gear button to open Preferences.



Step 4.

 Select Controller Manager in categories tree on the left side of Preferences and then click on “Add... —> Import TSI —> Import Other...” and navigate to the place on your computer where the “MF64_RMX_Mapping_1.1.tsi” mapping file is saved to open it.

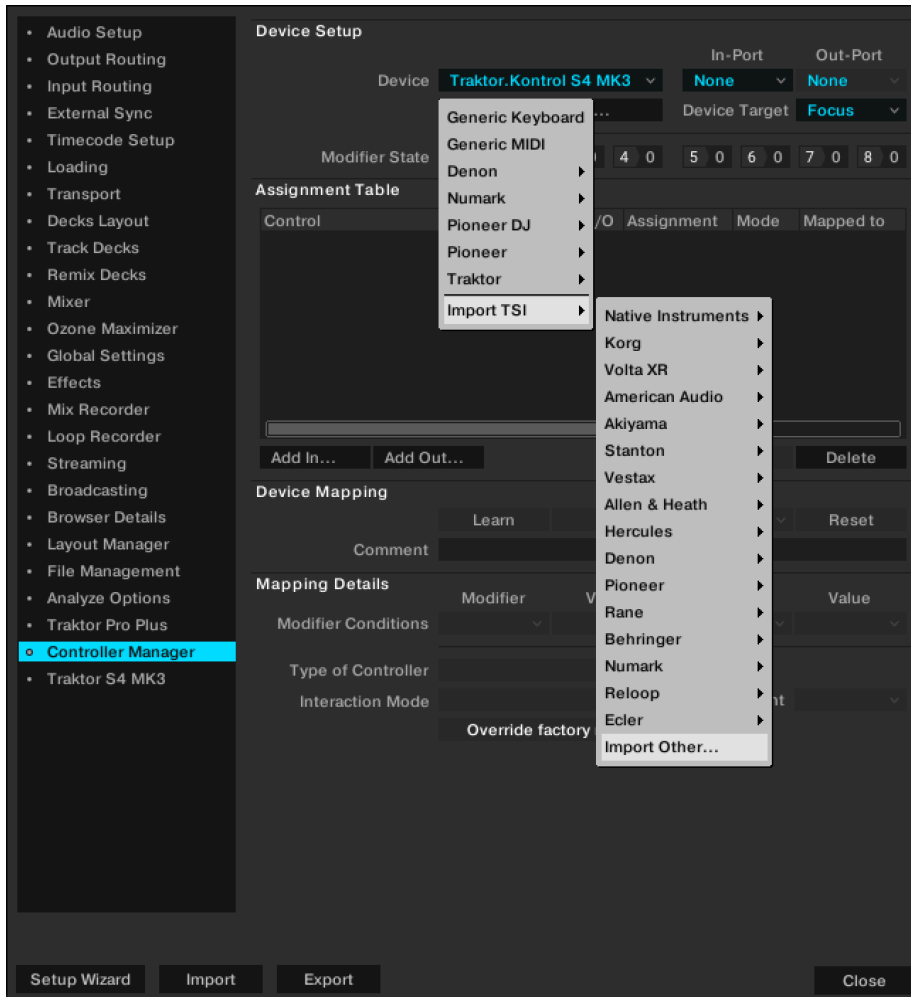

Step 5.

Once it is imported, you will see two different mapping devices associated with Midi Fighter 64. Ensure that In-Port and Out-Port are assigned to “Midi Fighter 64”.

MF64_RMXC_Mapping_1.1 - Generic MIDI (Midi Fighter 64 (Midi Fighter 64))

That is all! Enjoy the mapping.